



2020 & Newer GMC Fender Flare Cap Installation

1. Remove the factory fender caps (3 screws in fender, 2 screws in rocker panel and 1 internal clip, per side); see Figure 1 below.

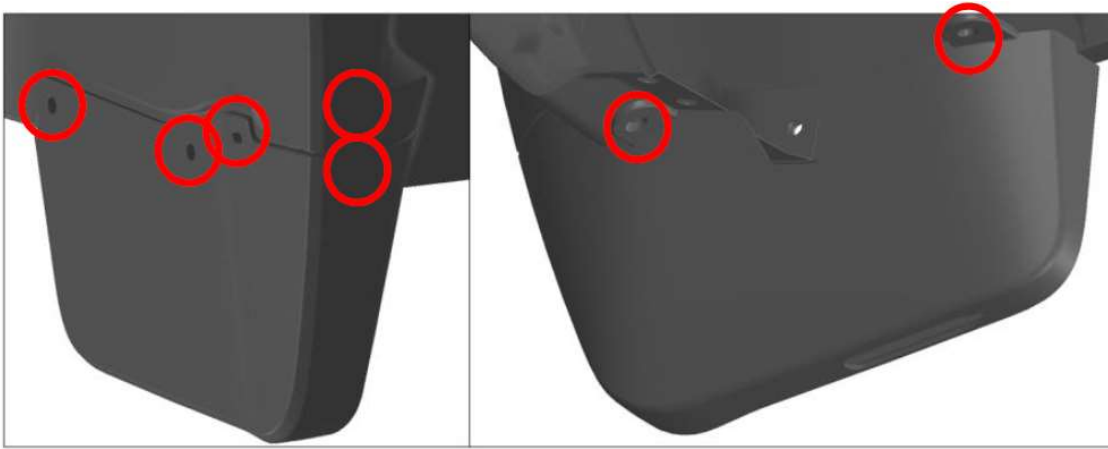


Figure 1: Factory fender flare cap mounting points

2. Remove the inside mounting plate and bolts (Figure 2)

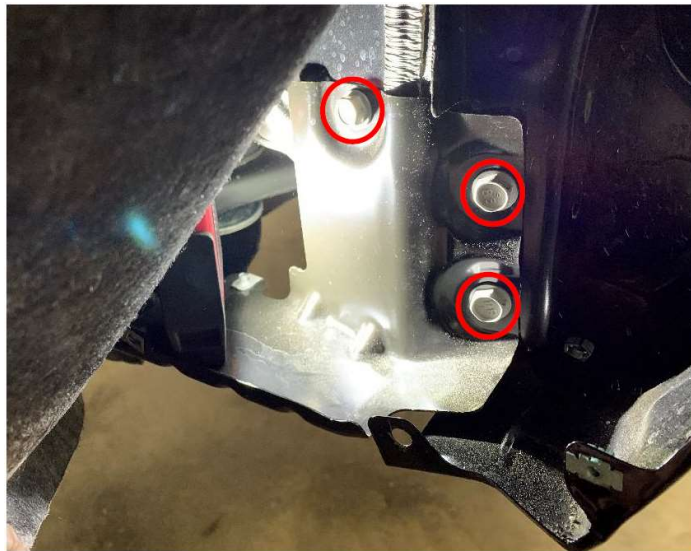


Figure 2: Inside mounting plate and bolts

3. Remove the necessary metal from the factory fenderwell to allow for proper fitment of the Kelderman fender flare caps.
NOTE: DO NOT REMOVE the mounting point for the retention clip for the inside rocker panel hole noted below (green circle in Figure 3).

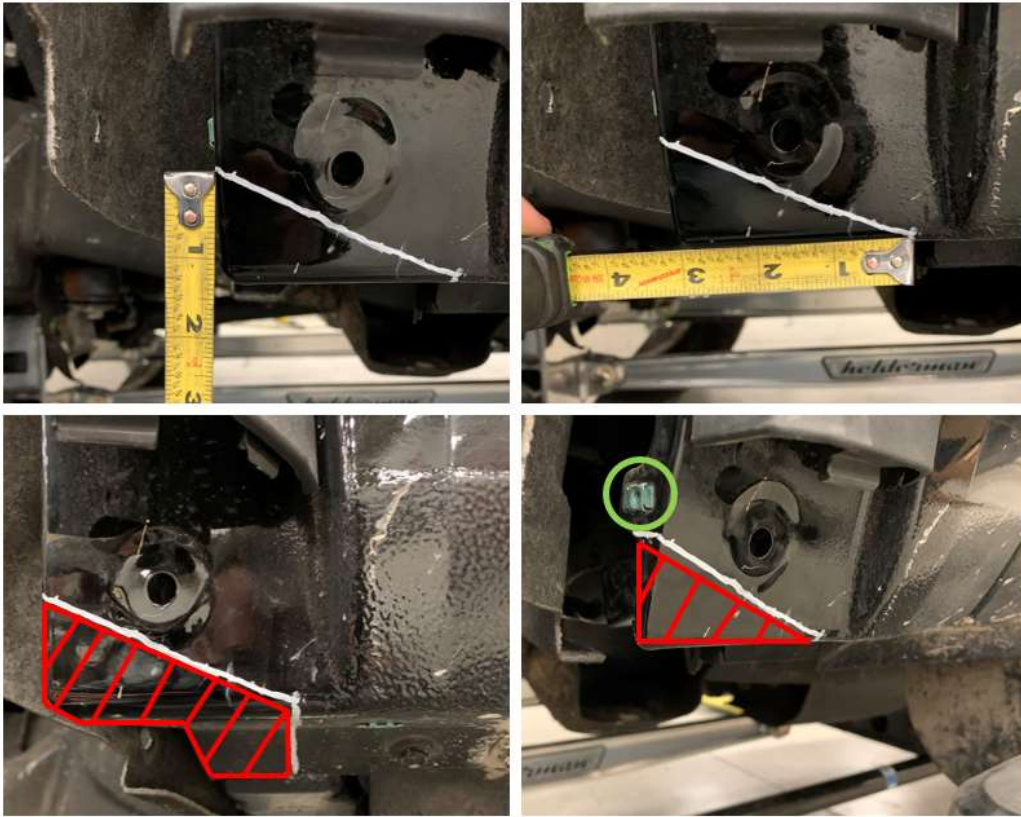


Figure 3: Metal removal necessary for cap install

4. Install the Kelderman fender flare cap using 2 of the OEM screws that were removed from Step 1 (Figure 4). Trim fender well felt as needed.



Figure 4: Kelderman fender flare cap installation points