



Kit # 10015144

2686 Highway 92—Oskaloosa, IA 52577


Phone: 800.334.6150

www.kelderman.com

2023+ Ford Radius Arm Installation Instructions

Measure from upper front hole to center of the knuckle. Thread the knuckle to set length to values below.

You will end up using the OEM bolts and nuts. (the upper radius arm hole on DS will use provided M18 lock nut and washer.)

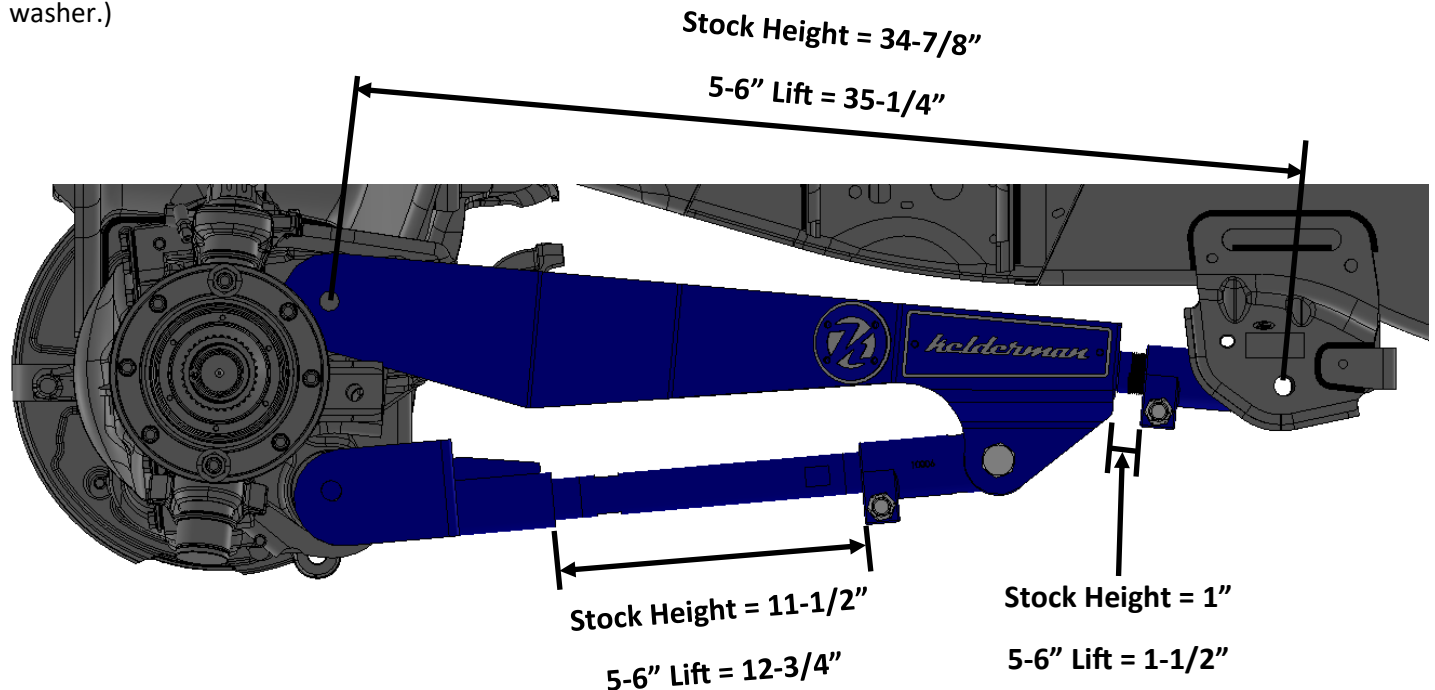

The dimension for each radius should be set to the value above before installation on the truck.

Adjust the threaded bar clockwise to extend and counter-clockwise to retract.

Install final OEM bolt to lower factory radius arm mount and torque to 150 ft-lbs.

Its recommended to have the truck aligned after installation.