

**Tools Required:**

- Phillips Head
- T10 Torx
- 7/64" Allen Key
- 9/64" Drill bit

**Kit Number: 10013706**

**Version 1.0**



**2686 Highway 92 - Oskaloosa, IA 52577**

**phone: 641.673.5396**

**2020+ International 4500-6500  
SwitchPro Mount**




1. Begin by removing the central panel of the headliner unit. This is held on with clips and should pop out by working the edges evenly (*opening the fold down accessory tray may give more room to work*); disconnect all cables in the central panel and set aside.

2. Then, remove the 2 screws holding the unit to the roof (*circled in green*). Last, pull down evenly on the edges of the unit to release it from the headliner, take care not to damage the headliner itself. Disconnect all cables going to the unit.




3. Remove the screws circled in green below (2 per side, 4 total) and set aside, these will be used later. Remove the screws circled in red below (2 per side, 4 total).

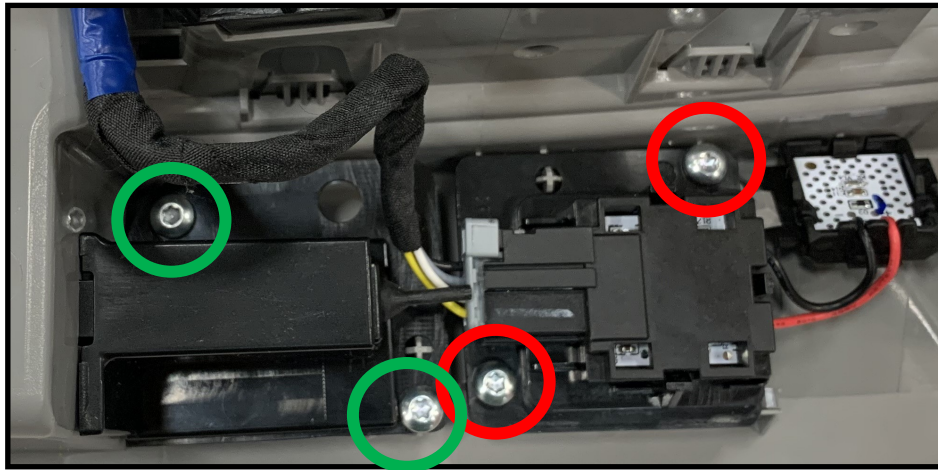

4. Next, lift the light control module (*was held in place with the “red” screws*) out of the way and remove the hinge, repeat on the other side. Secure the light control modules back in place.

5. Next, remove the accessory tray by pushing out and forward on the “ears” that were inside of the hinge removed in the prior step.

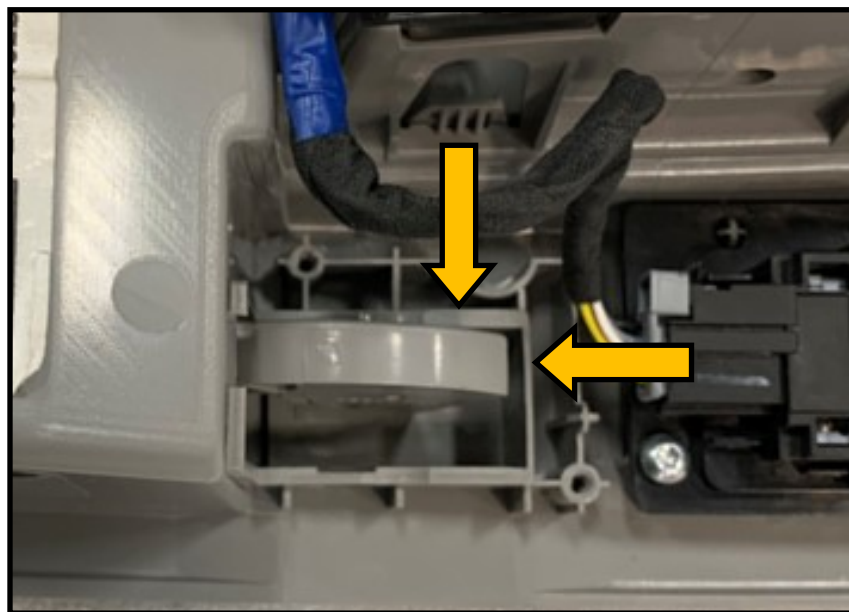




6. To prepare the unit for the new mount, locate the provided hole location template (*shown below*), align it with the feature noted in the green circle below and then ensure it's fitted against the lip of the headliner unit. Use a marker, or other similar, to transfer the hole location to the unit's surface. Once the hole is marked, remove the guide and drill through with a 9/64" drill.



7. Locate the screen mount and install it by feeding the wire pigtail through the central hole, make sure the screen is seated correctly and install the provided screws from the backside of the mount.. (*use the reference photo below to ensure correct orientation*).



7. Next, slide the mount into the accessory tray cavity and feed the pig tail through the opening on the driver side of the cavity. Secure the mount in place with the screws set aside in Step 2 (*take care not to over-torque the screws*).

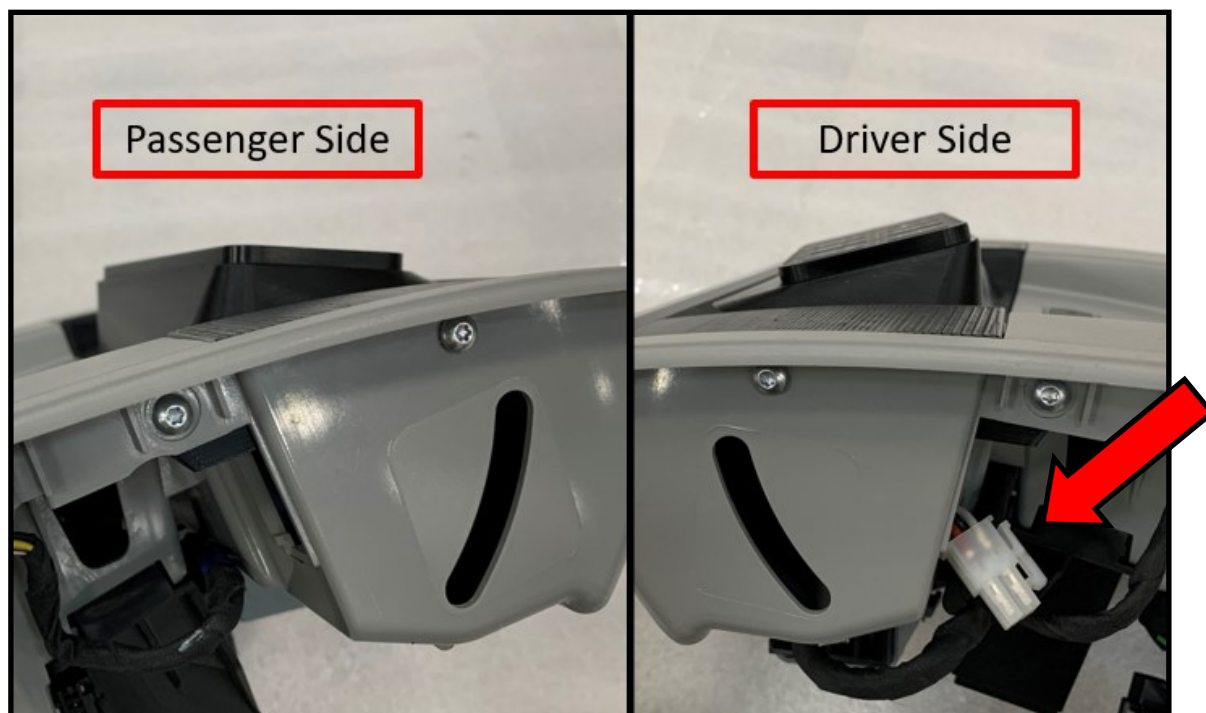

8. Last, route the power cable for the SwitchPro from the opening of the headliner to the battery. Follow the wiring instructions provided with the SwitchPro.

9. Connect the SwitchPro wiring harness to the pigtail from the screen, reconnect all OEM cables and reinstall the unit and central panel into the vehicle headliner. Installation of the mount is now complete.

