



2020 & Newer Chevrolet Fender Flare Cap Installation

1. Remove the factory fender caps (3 screws in fender, 2 screws in rocker panel and 2 internal fender clips, per side) (Figure 1).
NOTE: The 2 fender clips can be accessed by pulling back the fender well felt.

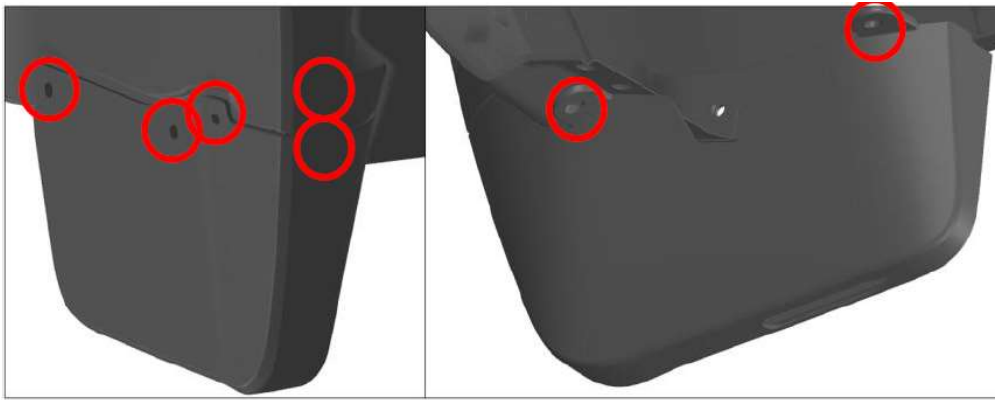


Figure 1: Factory fender flare cap mounting points

2. Remove the inside mounting plate and bolts (Figure 2)

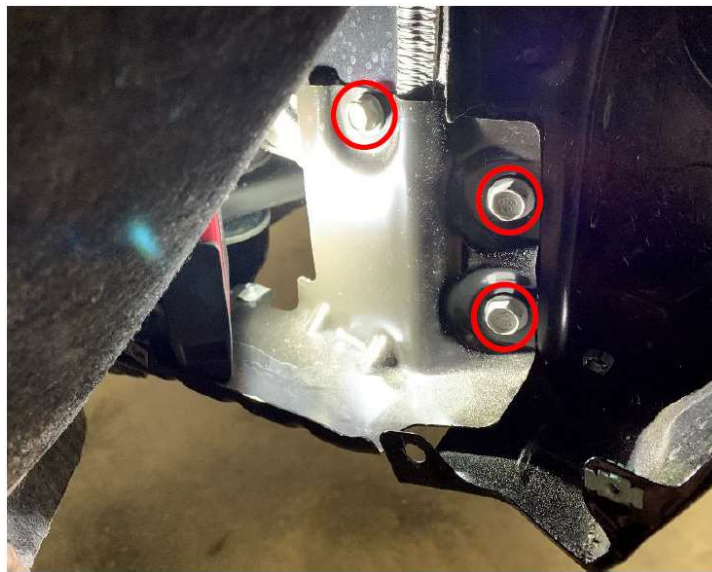


Figure 2: Inside mounting plate and bolts

3. Remove the necessary material (Figure 3) from the factory fenderwell to allow for proper fitment of the Kelderman fender flare caps. **NOTE: DO NOT REMOVE** the mounting points for inside rocker panel hole noted below (green circle in Figure 3)



Figure 3: Metal removal necessary for cap install (2 1/4" x 1 1/8")

4. Install the Kelderman fender flare cap using an OEM screws that was removed from the rocker panel (Figure 4).



Figure 4: Kelderman fender flare cap installation points